
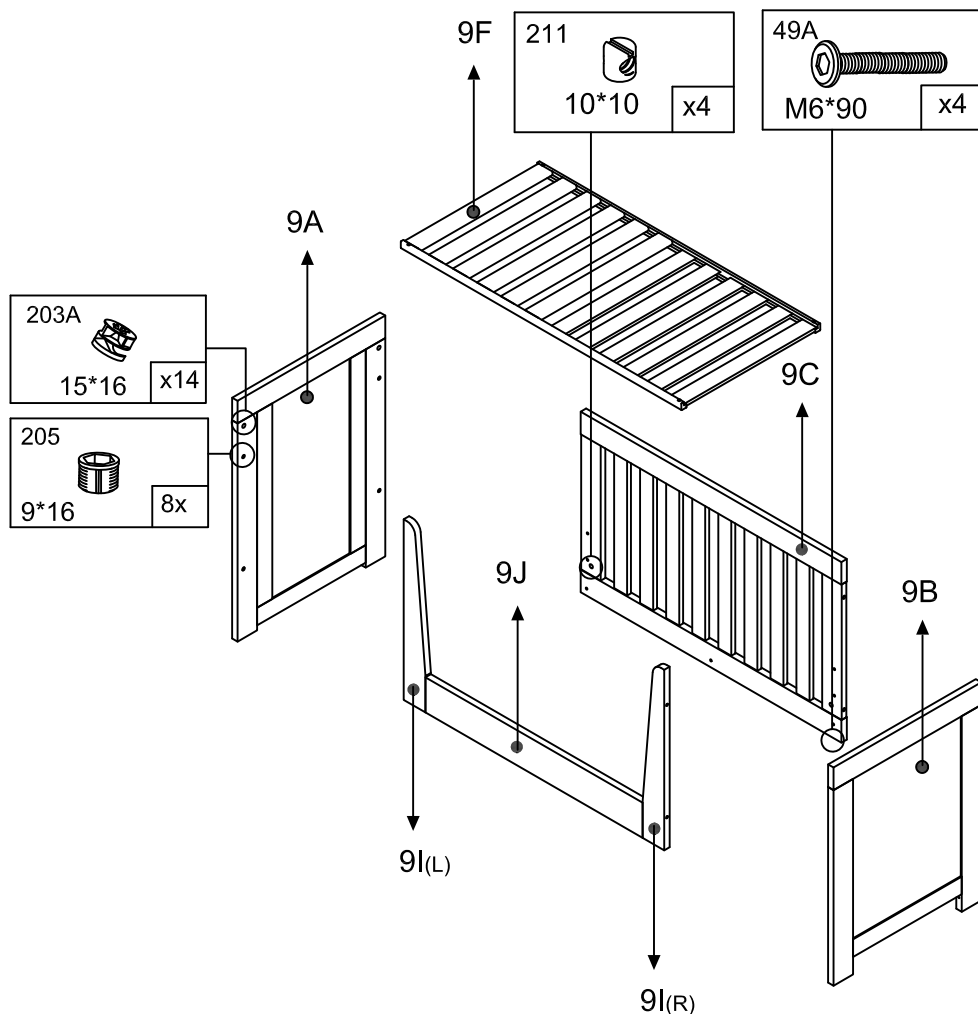












FLORIDA

















20 min.



FLO9454: 9P,9I,9J

9P

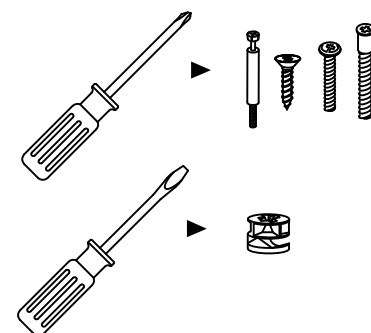

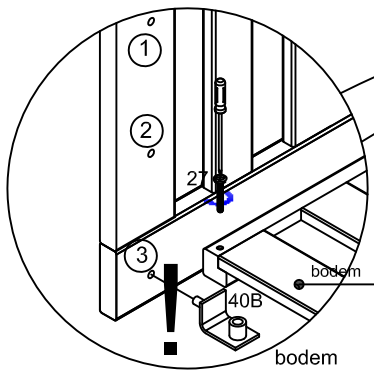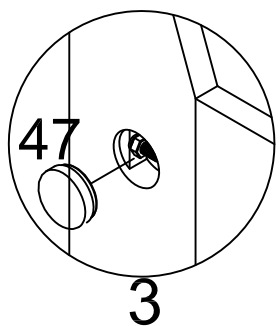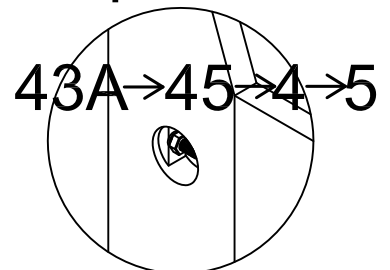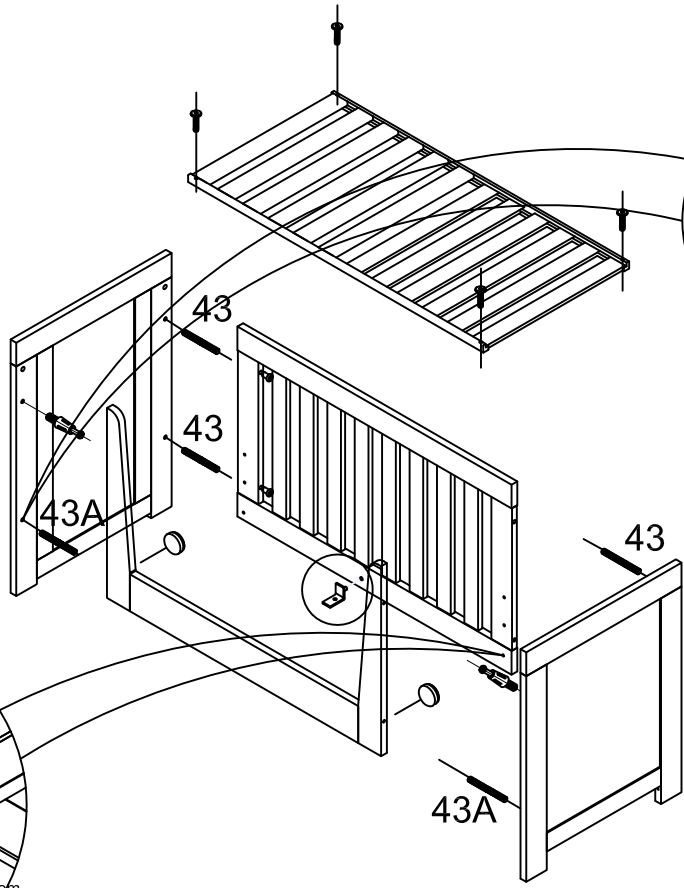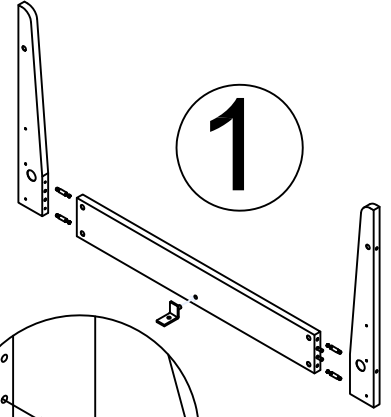

bodem vastschroeven!

